



5.1 Replacing Casing

5.1.1 Replacing Top Case

- First remove noise preventer "A".
- Remove Top Cover "B" and Rear Cover "C".

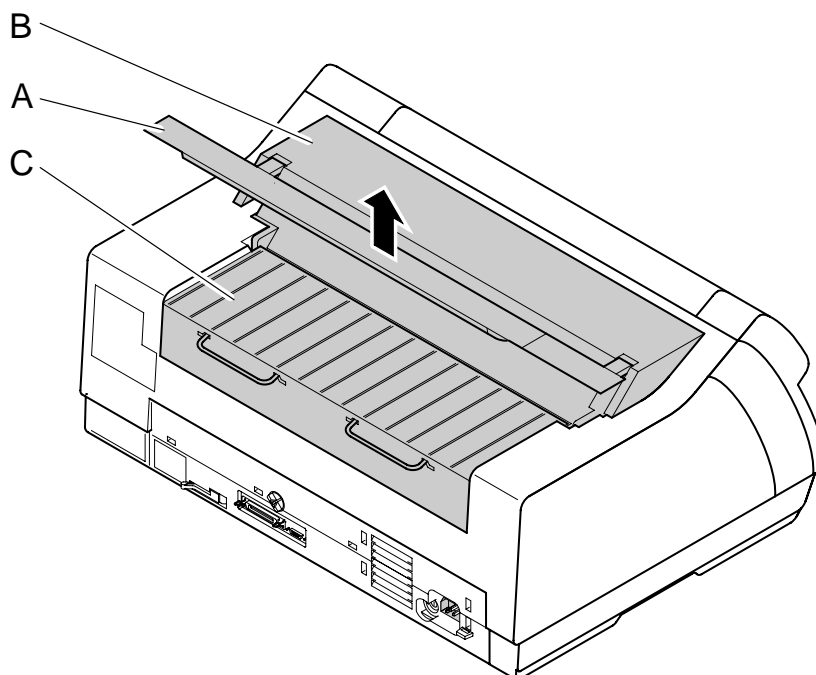


- Remove the front cover „A“.
- Remove the bottom cover tractor 1 „B“.

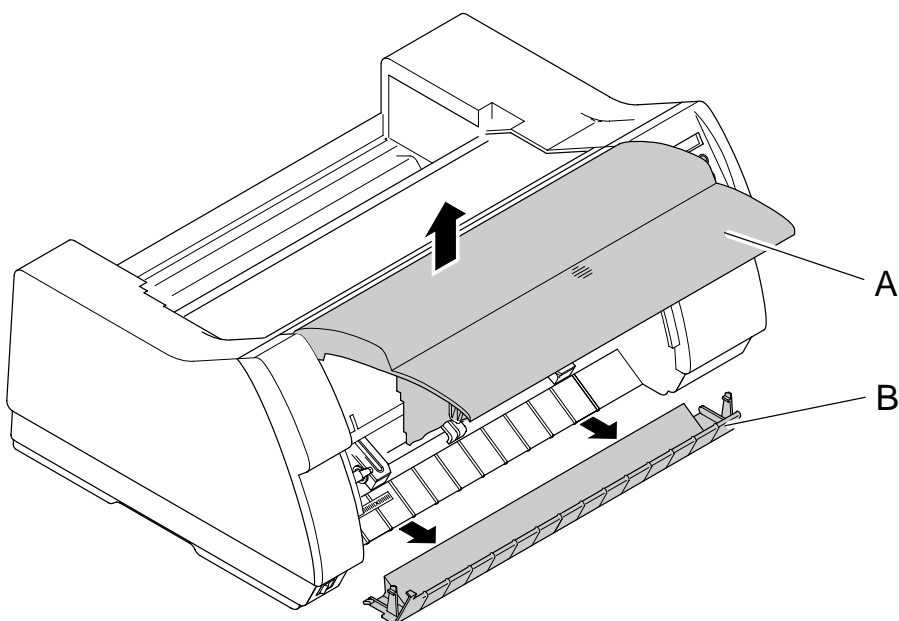


- Use a screwdriver to unlock the casing aperture as shown in the illustration and remove it.

Caution:
Be carefull while doing the above mentioned step. You may damage the panel cable.

- Disconnect the panel cable by pulling it out of the plug. Take caution.

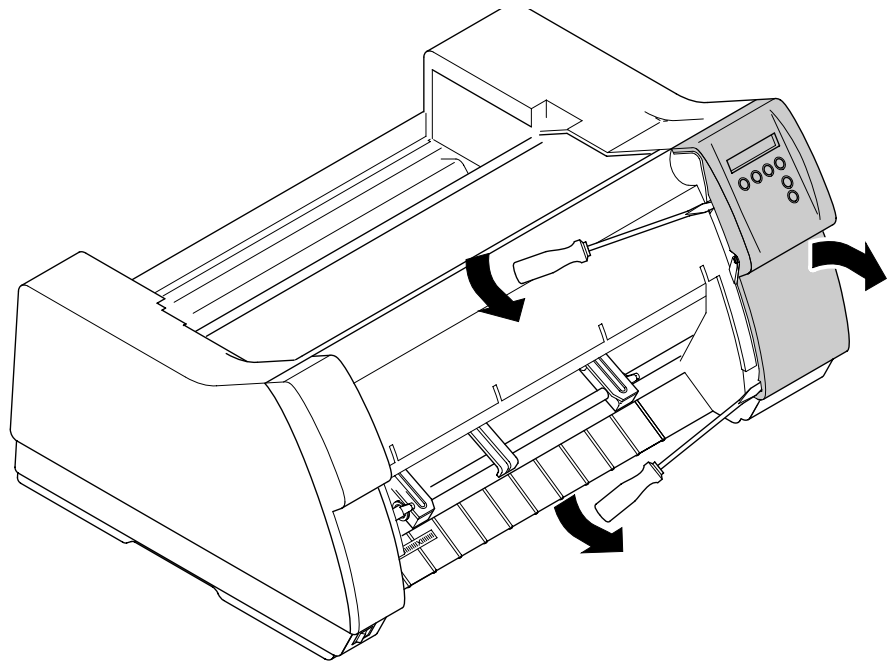


- Use a screwdriver to unlock the casing aperture as shown in the illustration and remove it.

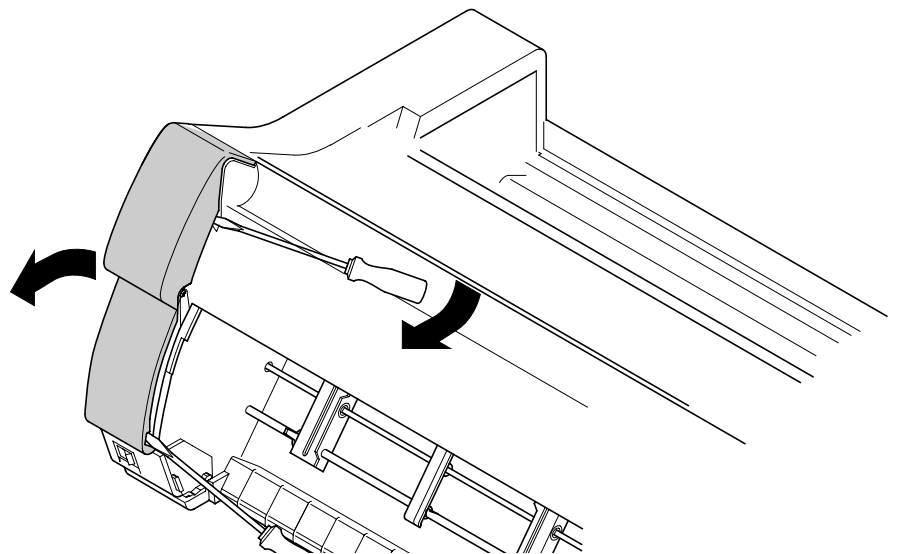

- Use a screwdriver to unlock the upper casing as shown in the illustration, lift it upward and remove it.

Caution:

Be carefull about the panel cable.

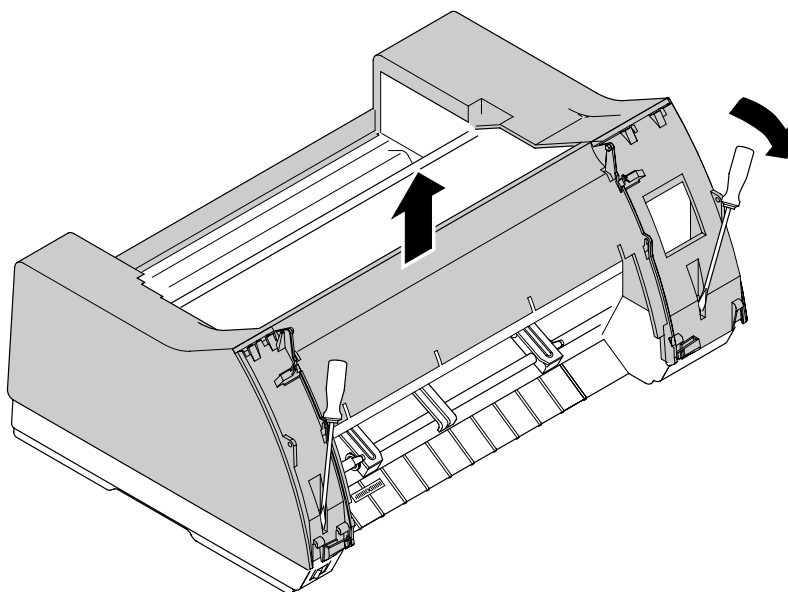

Assembly:

For reassembling the Top Case run the procedure backwards. Use a screwdriver to make sure that the snap lock on the rear side engages correctly on both sides.